

Dimensions of Mounting Bracket for FRL (UNIT=MM)

											
Spacer with L-Type Bracket	L-Type Bracket	A	B	C	D	E	F	G	R	L	Applicable Model
Y20L	B210L	24	15	5.5	3	30	5	10	2.75	33	AC2000
Y30L	B310L	35	16	7	4	41	7	11	3.5	45	AC3000
Y40L	B410L	40	22	9	4	50	7	14	4.5	50	AC4000
Y50L	B510L	40	22	9	4	50	7	14	4.5	50	AC4000-06
Y60L	B610L	50	23	12	4	69.8	10.5	15	6	63	AC5000
											
Spacer with T-Type Bracket	T-Type Bracket	A	B	C	D	E	F	G	R	L	Applicable Model
Y20T	B210T	24	15	5.5	3	30	5	10	2.75	33	AC2010
Y30T	B310T	35	16	7	4	41	7	11	3.5	45	AC3010
Y40T	B410T	40	22	9	4	50	7	14	4.5	50	AC4010
Y50T	B510T	40	22	9	4	50	7	14	4.5	50	AC4010-06
Y60T	B610T	50	23	12	4	69.8	10.5	15	6	63	AC5010



B#20 Bracket

Model	Used for
B220	AR/AW2000
B320	AR/AW3000
B420	AR4000-5000 AW4000-5000




B#40 Bracket

Model	Screw Hole Size	Used for
B240	M4×8	AF/AL2000
B340	M4×8	AF/AL3000
B440	M5×10	AF/AL4000
B540	M5×10	AF/AL4000-06
B640	M6×10	AF/AL5000

Mounting Bracket Dimensions



A Series FRL Mounting Hardware

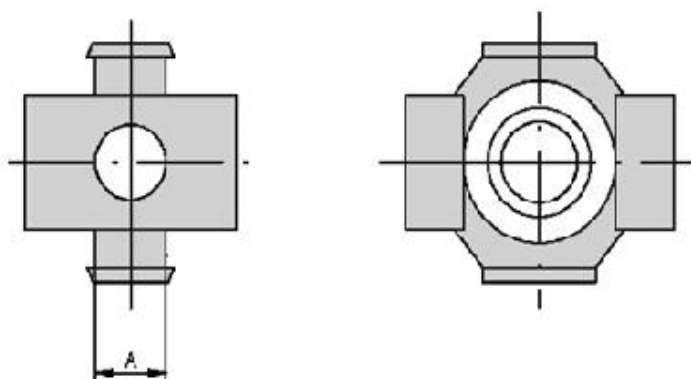

Y#0 SPACER



L BRACKET	T BRACKET	L SPACER BRACKET	T SPACER BRACKET	A	B	C	D	E	F	G	H	R	L
B210L	B210T	Y20L	Y20T	24	15	5.5	3	30	5	10	48	2.75	33
B310L	B310T	Y30L	Y30T	35	16	7	4	41	7	11	70	3.5	45
B410L	B410T	Y40L	Y40T	40	22	9	4	50	7	14	80	4.5	50
B510L	B510T	Y50L	Y50T	40	22	9	4	50	7	14	80	4.5	50
B610L	B610T	Y60L	Y60T	50	23	12	4	69.8	10.5	15	100	6	63

IN (MM)

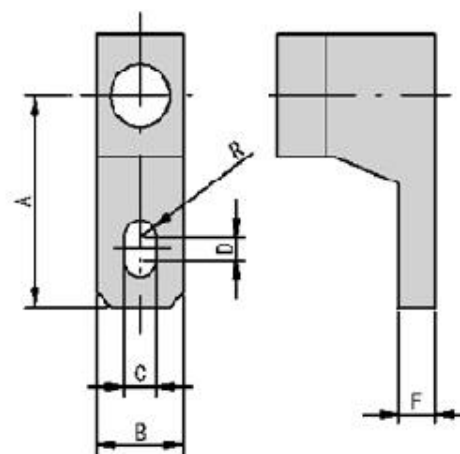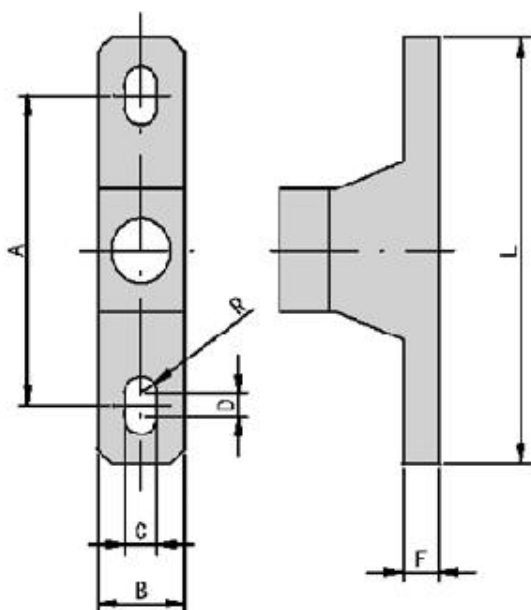

B#10L BRACKET

A Series FRL Mounting Hardware

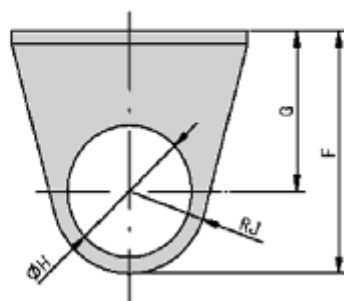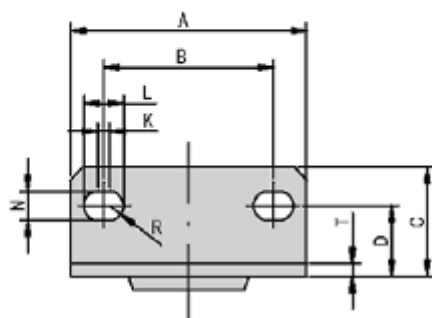

B#20 -Bracket for AR & AW

In (MM)	A	B	C	D	F	G	H	J	K	L	N	R	T	FOR
B220	55	34	35	19	50	30	33.5	20	1	5.4	5.4	2.7	2.3	AR/AW2000
B320	53	40	21.5	14	64	39	42.5	25	1.5	6.5	6.5	3.25	2.3	AR/AW3000
B420	70	54	27	18	79.2	49.2	52.5	30	2	8.5	8.5	4.25	2.3	AR/AW4000